

## Please Read before Proceeding

- If the security lock is on, deactivate it. After work is complete, activate the security lock again.
- Start work after ensuring that the power has been turned off.
- After cleaning is complete, check to ensure that all dismantled parts are restored to their original positions. Failure to restore the parts may result in malfunction of the printer.
- For details on separately sold items, please consult our authorized dealers.

## Maintenance of Card Load Roller

Card jams may occur if the card load roller is dirty.

1. Remove the card hopper
2. Apply alcohol (sold separately) to a wiper (sold separately), and use it to wipe the surface of the card load roller
  - Wipe while turning the card load roller in the anti-clockwise direction.
3. Install the card hopper

