

Please Read before Proceeding

- If the security lock is on, deactivate it. After work is complete, activate the security lock again.
- Start work after ensuring that the power has been turned off.
- If the printer is used every day, make sure to clean the cleaning roller daily at the end of the operation.
- Do not perform any work on the printer door. Do not place heavy objects or apply load on the printer. Doing so may damage it.
- After washing, allow the cleaning roller to dry completely before installing it to the printer.
- Do not wash the cleaning roller with anything other than water (e.g., alcohol).
- Replace the cleaning unit with a new one after using it for about one year. For details on its replacement, please consult our authorized dealers.
- After cleaning is complete, check to ensure that all dismantled parts are restored to their original positions. Failure to restore the parts may result in malfunction of the printer.

Maintenance of Cleaning Roller

The function of the cleaning roller is to remove any dirt or dust attached to the card. The color of the printed card may appear faded or dirt may appear conspicuous if the cleaning roller is dirty. Card jams may also occur as a result.

1. Open the printer door
2. Remove the cleaning unit
3. Wash the cleaning roller with water
 - Wash the roller with water, and remove any dirt from the surface of the cleaning roller with your finger.
4. Allow the cleaning roller to air dry
5. Set the cleaning unit, and close the printer door
 - With the roller facing the right, insert it all the way in.

