

Please Read before Proceeding

- Start work after ensuring that the power has been turned off.
- After cleaning is complete, check to ensure that all dismantled parts are restored to their original positions. Failure to restore the parts may result in malfunction of the printer.
- Replace the fan filter with a new one after using it for about one year. For details on its replacement, please consult our authorized dealers.

Maintenance of Fan Filter

The color of the printed card may appear faded or dirt may appear conspicuous if the fan filter is dirty. Perform cleaning after printing about 10,000 cards.

1. Remove the filter cover located on the side of the printer
2. Remove the fan filter
3. Remove any dirt that is attached to the fan filter using a vacuum cleaner
 - Hold the filter with your hand to prevent it from being sucked into the vacuum cleaner.
4. Set the fan filter
5. Set the filter cover

